

# DP-641

 
*Tally*  
**DASCOM**

This guide provides information on the daily use of the DP-641 printer.  
For additional information, please refer to the DP-641 User Guide.


Before you begin, please visit <https://www.dascom.com/downloads.html>  
Printing Solutions; Download Centre, to download the according printer driver.



## Printer features

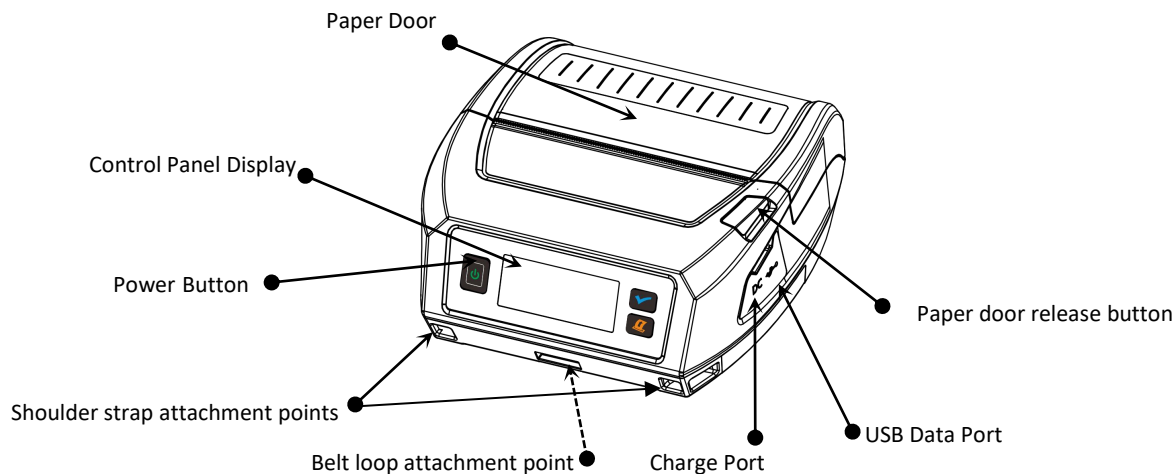

## Media

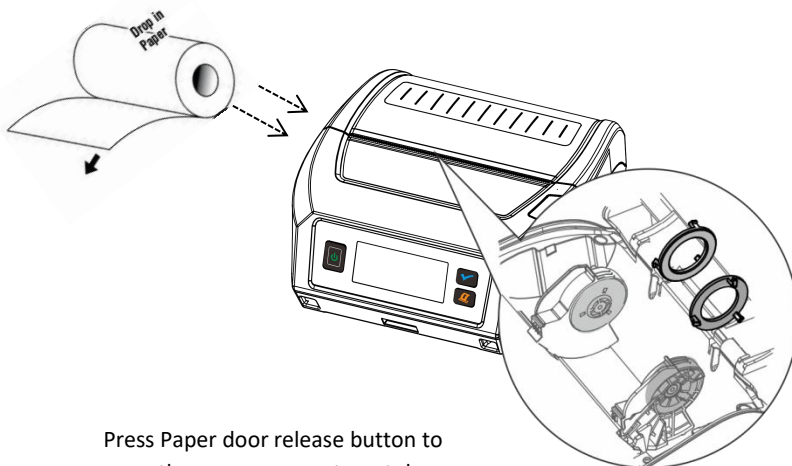 


Press Paper door release button to open the paper compartment door.  
Pull small leader of paper out and close paper door. "Clicks" when properly closed.

How to change from  
19mm/Label to  
13mm/Paper roll holder

## Battery

The battery icon on the display will indicate the battery level.

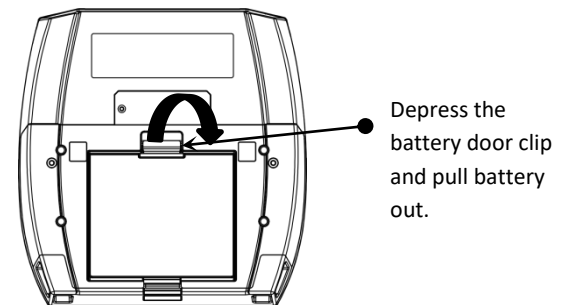 



Depress the battery door clip and pull battery out.





## Disposal




Please dispose the batteries separately and free of cost at your sales agency or the designated local collecting points.  
Therefore please consider the national recycling standards!  
Disassembly and removal of the batteries are described in the User Guide.

# DP-641 Quick Start Guide

## Control Panel indicators

POWER & PAPER FEED	FUNCTION	HOW TO:
 Power Button	Power up & Power down	Press & hold for ~ 3 seconds
	Access Web page *	Press 2 times to enter Press 2 times to exit
 Paper feed button	Advance paper	Press and hold
	Self-test print	Press 2 times rapidly

DISPLAY NAVIGATION:	FUNCTION	HOW TO:
 Menu button	Menu set up	Press 1 time
 Paper feed button	Scroll down	Press to scroll down
 Menu button	Select category Scroll up	Press 1 time Press 1 time
 Power button	Save setting Go back Return to main menu	Press 1 time Press 2 times Press 3 times

 
Power & Status (Green)	Power & Status (Yellow)	Power & Status (Red)	Indication
			
On	Off	Off	Power supplied by battery
On	Off	Off	Power supplied by adapter
Off	On	Off	Charging battery
Off	Off	On	Booting up
Off	Off	On	Power on/off
Off	Off	On	Battery failure
Flashing (If no battery is charged)	Flashing (If battery is being charged)		Config mode

## Dual radio DP-641

Dual Radio printers arrive with Wi-Fi and BT modules set to Discover "ON". If desired, go to "BT Config" or "Wireless Config" to set a radio to "OFF"

## USB Access to Printer Web Pages

1. Press and hold the POWER button for 3 seconds to power on the printer.
2. Connect a USB cable between the printer and a PC.
3. \* To access the DP-641 web page, press the Power button twice rapidly. This will put the printer into Configuration mode.
4. When the printer is in Configuration mode the Power LED will flash.
  - a. Open browser on your PC and type 169.254.200.1 into the address bar of the browser and hit Enter - A login box should appear:
  - b. Type "0000" and hit Enter- you should now be at the home page for DP-641 Configuration.
5. To return the printer to normal operating mode, double click the POWER button. The Power LED will be returned to a solid light.

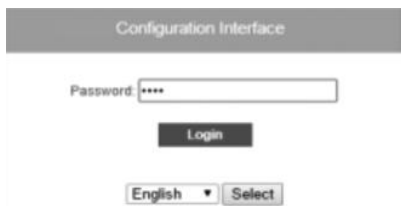

Some country specific Windows Operating Systems have not activated or installed the RNDIS driver to use the IP-over-USB mode. Therefore, please refer to our web site <https://www.dascom.com/downloads.html> support, downloads, drivers and software, to download the RNDIS driver.



Once the printer is connected via USB and in *IP over USB* mode it is temporarily not possible to access the Internet.

## Dascom Representatives

Americas	Dascom Americas LLC	34 Lakeview Court	Verona, VA 24482, USA	Phone: +1 (877) 434 1377
UK	DASCOM GB Ltd	Hart House, Priestley Road	Basingstoke, Hampshire, RG24 9PU	Phone: +44 (0) 1256 355130
Germany	DASCOM Europe GmbH	Heuweg 3	D-89079 Ulm	Phone: +49 (0) 731 2075 0
France	DASCOM Europe GmbH	117 Avenue Victor Hugo	92100 Boulogne-Billancourt	Phone: +33 (1)73 02 51 98
Singapore (AP)	DASCOM AP Pte Ltd	2 Jurong East Street 21	#05-42, IMM Building, Singapore 609601	Phone: +65 6760 8833